

CIVIC ARENA SCOREBOARD INSTRUCTIONS

PRESS ANY KEY TO TURN ON SCOREBOARD

Start a new game – [GAME TIME] – repeat until your start time appears

Set up a different game – [GAME TIME] 1 to 99 minutes [ENTER]

Change period time – [TIME] minutes:seconds or 0 [ENTER]

Start and stop times – [STOP/GO] - also curfew time-out

Add to score or shots [HSC] or [VSC] – [HSH] or [VSH]

Correct scores or shots – [HSC] or [VSC] 0 to (1)99 [ENTER]

Start a time-out (time stopped) – [TIME] then [HSC] OR [VSC] 1 to 59 seconds [ENTER]

Set up 2 minute penalty – [HOME PENALTY] or [VISITOR PENALTY] [ENTER] [ENTER]

Set up 4 or 5 minute [HPEN] or [VPEN] then [TIME] (repeat) [ENTER] [ENTER]

Add player number – 1 to 99 before the second [ENTER] above

THE SHORTEST PENALTY IS AUTO-CANCELLED WHEN AN OPPOSING SCORE IS POSTED

To keep the penalty press [ENTER] while it is still flashing

Correct or zero penalty – [HPEN] or [VPEN] then [1] or [2] followed by [TIME]

Minutes:seconds or 0 [ENTER] [ENTER]

Hold penalties in run time – [PENALTY STOP/GO] to stop and start penalty timing

Show time of goal or penalty (time stopped) – [TIME OF] (shows on main time for 5)

At the end of the period – Period indicator adds one, GameTime returns to start time

Start or end intermission [INTERMISSION] minutes or 0 [ENTER] - horn sounds

Set interval horn [TIME] [HORN] 1 to 9 MINUTES or 10 TO 1:59 SECONDS [ENTER]

Cancel interval horn [TIME] [HORN] [0] [ENTER]

To go to or from time of day [TIME] [ENTER] at any time even with game running